


U-232

USB based Serial Port replacement

Version 2.0

Revision 5.4.24

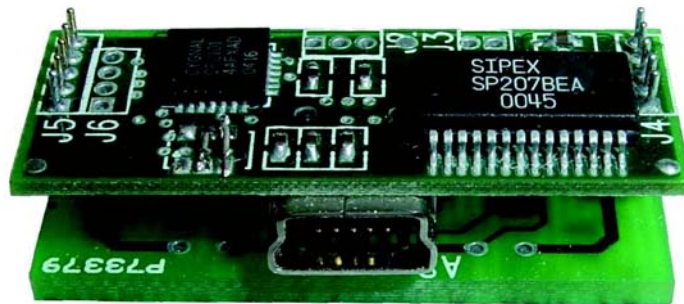

© Copyright 2005-2010, Timewave Technology Inc., All Rights Reserved

WARRANTY

TIMEWAVE TECHNOLOGY INC. LIMITED ONE YEAR WARRANTY

WHO IS COVERED

This warranty is extended only to the original purchaser of the A.05101, A.5103 or A.05105 U232.

WHAT WE WILL DO

If your U232 fails in normal use because of a defect in workmanship or materials within one year of the date of purchase, we will repair or replace (at our option) the U232 at our factory without charge to you.

WHAT YOU MUST DO

First, double check your connections and operating procedure. If you're certain that the U232 is faulty, notify Timewave Customer Service immediately. If Timewave is unable to resolve the problem by telephone or email, we will give you an RMA number and ask you to return the U232. You must pay all shipping and insurance charges for returning the unit to our factory.

WHAT IS NOT COVERED

We cannot be responsible for damage caused by accidents, abuse, misuse, improper installation, or unauthorized attempts to repair the unit. This warranty does not cover any parts other than the U232.

SERVICE WARRANTY

Timewave service work performed in connection with this warranty is warranted to be free from defects in materials and workmanship for 30 days from the date of repair. All other terms of the limited warranty apply to the service warranty.

HOW TO CONTACT TIMEWAVE

Contact Timewave Customer Service:
Telephone at (651) 489-5080
FAX at (651) 489-5066.

Mailing and shipping address is:
1025 Selby Ave.,
Suite 101
St. Paul, MN 55104

email: sales@timewave.com
techsupport@timewave.com
service@timewave.com

web: <http://www.timewave.com>

TIMEWAVE MAKES NO OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

©2001, 2006, 2010 by Timewave Technology Inc., St. Paul, MN USA

Please read before installing this upgrade kit.

Be sure to review how to order information at <http://www.timewave.com> to be certain that you have received the correct upgrade kit.

1. Do not attempt to install this RS-232 to USB conversion kit unless you are an experienced electronics technician. Specifically, you must be able to remove a DB-25 or DB-9 connector from a PC board without damaging the traces, vias or the circuit board. If you are not sure you can complete that task, **DO NOT ATTEMPT TO INSTALL THIS KIT!** Timewave is not responsible for damage caused by improper removal and installation technique.
2. Be sure to download the latest driver software for the U232™ upgrade kit from <http://www.timewave.com>.

Thank you for purchasing the U232 RS-232 to USB conversion module. The Timewave part number of this kit is A.05101, A.05103 or A.05105.

This manual has two sections:

1. RS-232-to-USB interface module Hardware Installation
2. RS-232-to-USB interface module Software Installation

Section 1

RS-232-to-USB Interface Module Hardware Installation

You may need the following tools to complete this upgrade:

- Solder pencil and solder
- Needle nose pliers
- Small adjustable wrench or nut driver for hex jack screws
- Phillips Screw driver
- Small straight-blade screwdriver
- Solder removal tools (de-soldering braid, de-soldering vacuum pump, etc.)

√ Installation steps

____ 1) Remove all cables and power from your unit.

____ 2) Dis-assemble your unit so that you can remove the PC board that has the DB-9 or DB-25 connector.

Do not attempt the following steps if you do not have experience de-soldering multi-pin connectors from PC boards!

____ 3) Carefully de-solder and remove the DB-9 or DB-25-pin connector from your PC board. **Do not burn the PC board with excess heat! Do not damage the vias or traces on the PC board!**

____ 4) Clean all excess solder from the vias for the DB-25 or DB-9 connector. **Do not burn the PC board with excess heat! Do not damage the vias or traces on the PC board!**

____ 5) Insert the RS-232-to-USB interface module into the DB-25 or DB-9 connector vias from the same side of the PC Board that had the DB connector. Mount the USB connector facing the edge of the PC Board.

____ 6) Hold the RS-232-to-USB interface module firmly against the PC Board. Carefully solder the pins of the module to the pads and vias. Use no-clean solder or clean the board with the correct solvent for your solder after the soldering is finished.

____ 7) Carefully inspect all solder joints on the pins of the RS-232-to-USB interface module for cold solder joints and missed or partially soldered pins.


____ 8) Re-assemble your unit.

____ 9) Proceed to software driver installation before re-connecting your converted unit.

Quick Install


Insert the TIMEWAVE U232 Driver CD into your computer.

The Install Driver dialog should appear. If not, run *U232VCPInstaller.exe* from the CD.

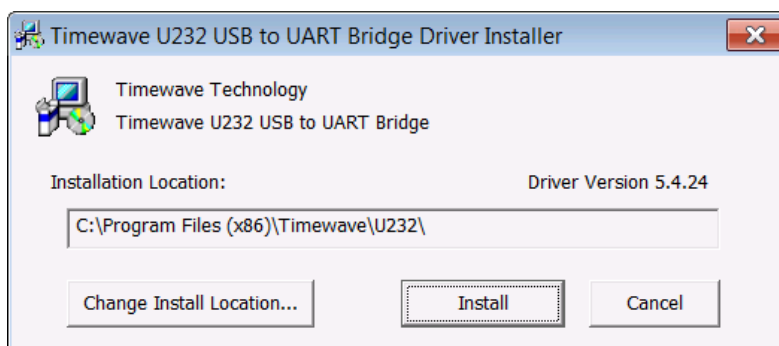

Click on *Install*.

The *Installation Successful* dialog will appear. You may also get a restart dialog.

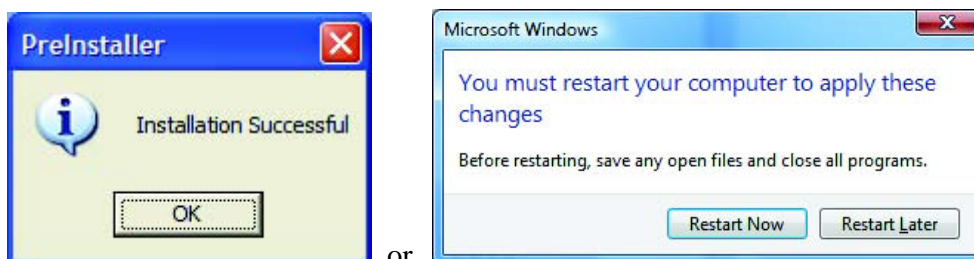


If you get the restart dialog, click on “Restart Now” to reboot your computer.

The drivers are now on your system. Connect the U232 based device.


If you are using Windows Vista or Windows 7, the *Ready to Use* notice will appear. You are finished.




If you are using XP, the *Found New Hardware* notify box should appear. If not, manually uninstall the driver from the *Device Manager* and reconnect.

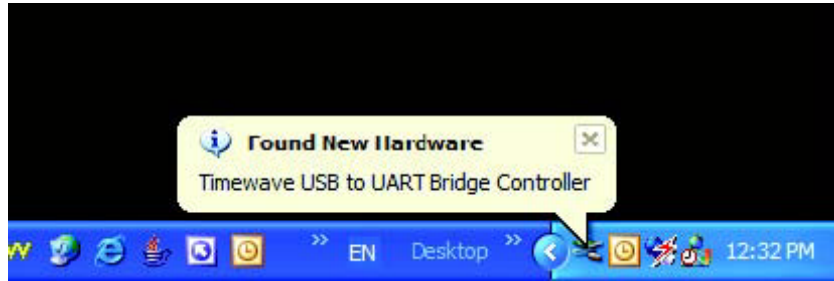

The *Found New Hardware Wizard* should appear. Click on *Next* to begin the driver installation.

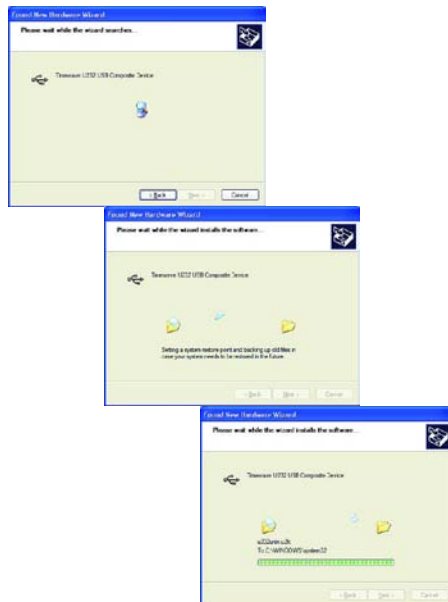

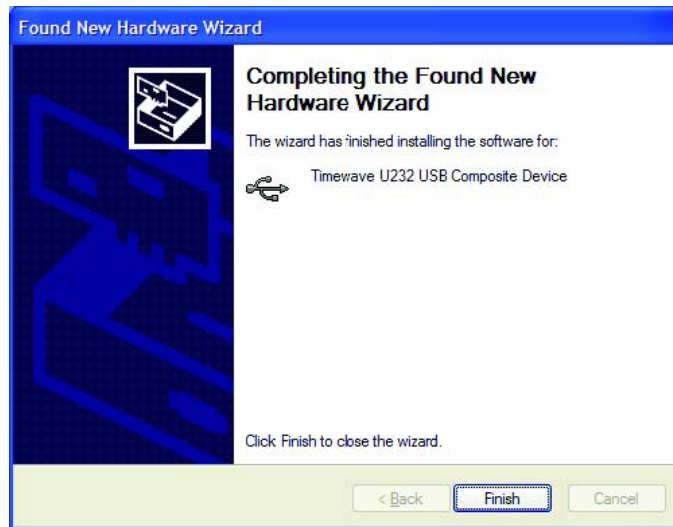

The USB driver is now installed.

Next, the wizard will restart for the COM port driver. Follow the same setup instructions as for the USB driver.



The COM driver is now installed and your COM port should appear.

